




ALUGRIP - assembly and adjustment

Purpose of the information:


Simplification of AluGrip post assembly. Inform the customer about the correct setting of the AluGrip side pillar locking pin.

ContentTI:

Schematic representation of a pillar.

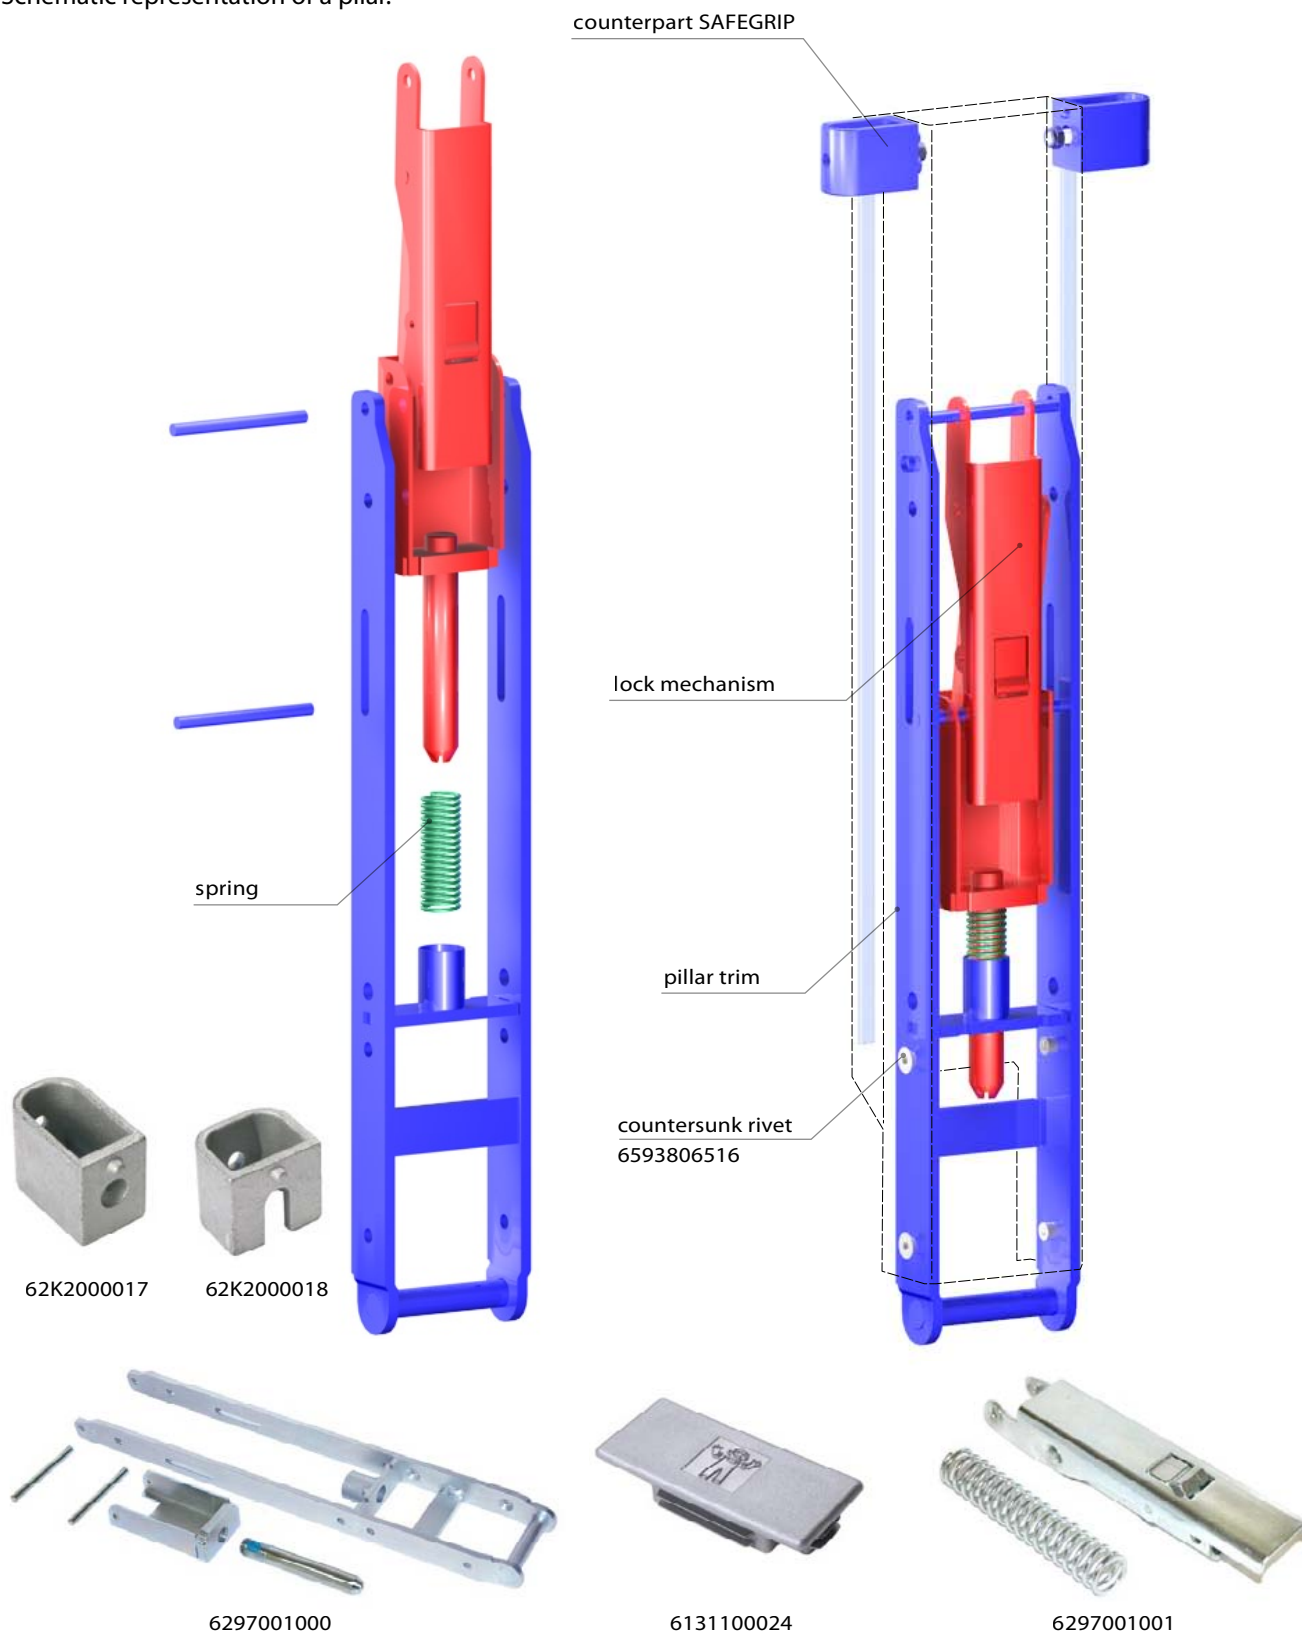


Assembly procedure

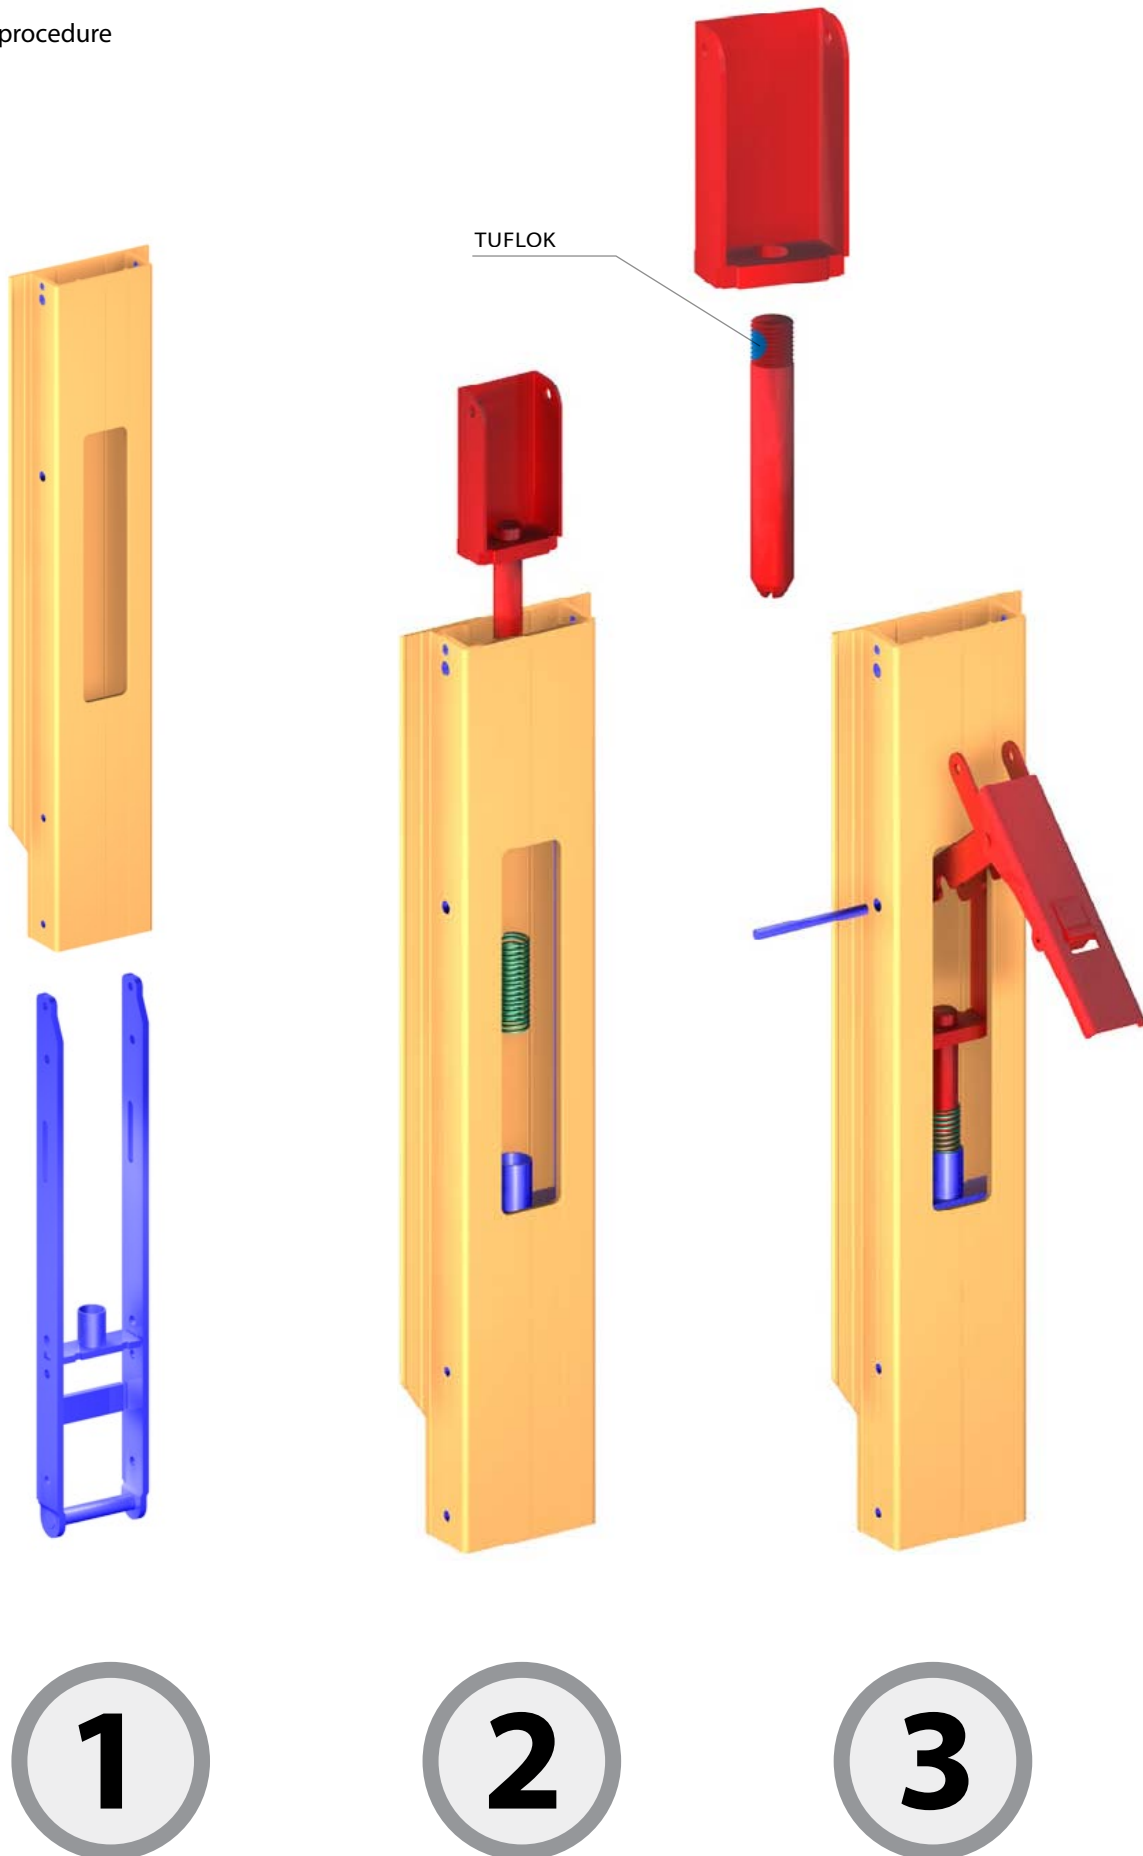



2021/02/12

TIV11/04 - ALUGRIP - ASSEMBLY AND SETTINGS

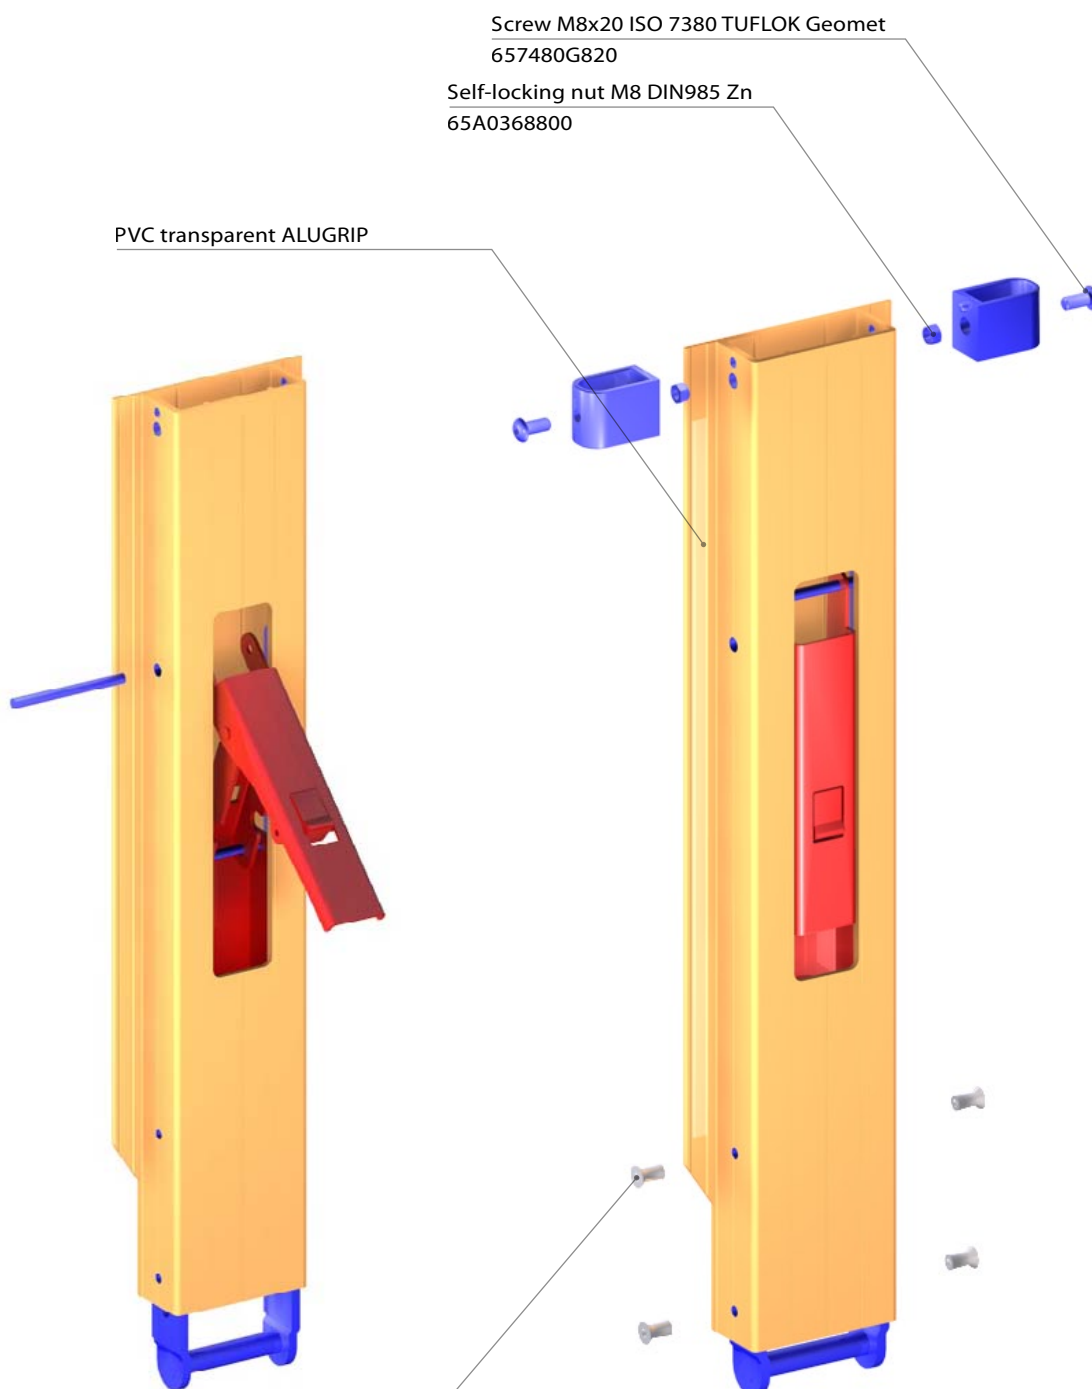

Screw M8x20 ISO 7380 TUFLOK Geomet
657480G820

Self-locking nut M8 DIN985 Zn
65A0368800


PVC transparent ALUGRIP

Rivet market. 6.5x16.5mm Al / Al countersunk
6593806516

4

5

The stability of the column when mounted on the body can be increased by extending the locking pin by up to 5 mm compared to the standard factory setting.

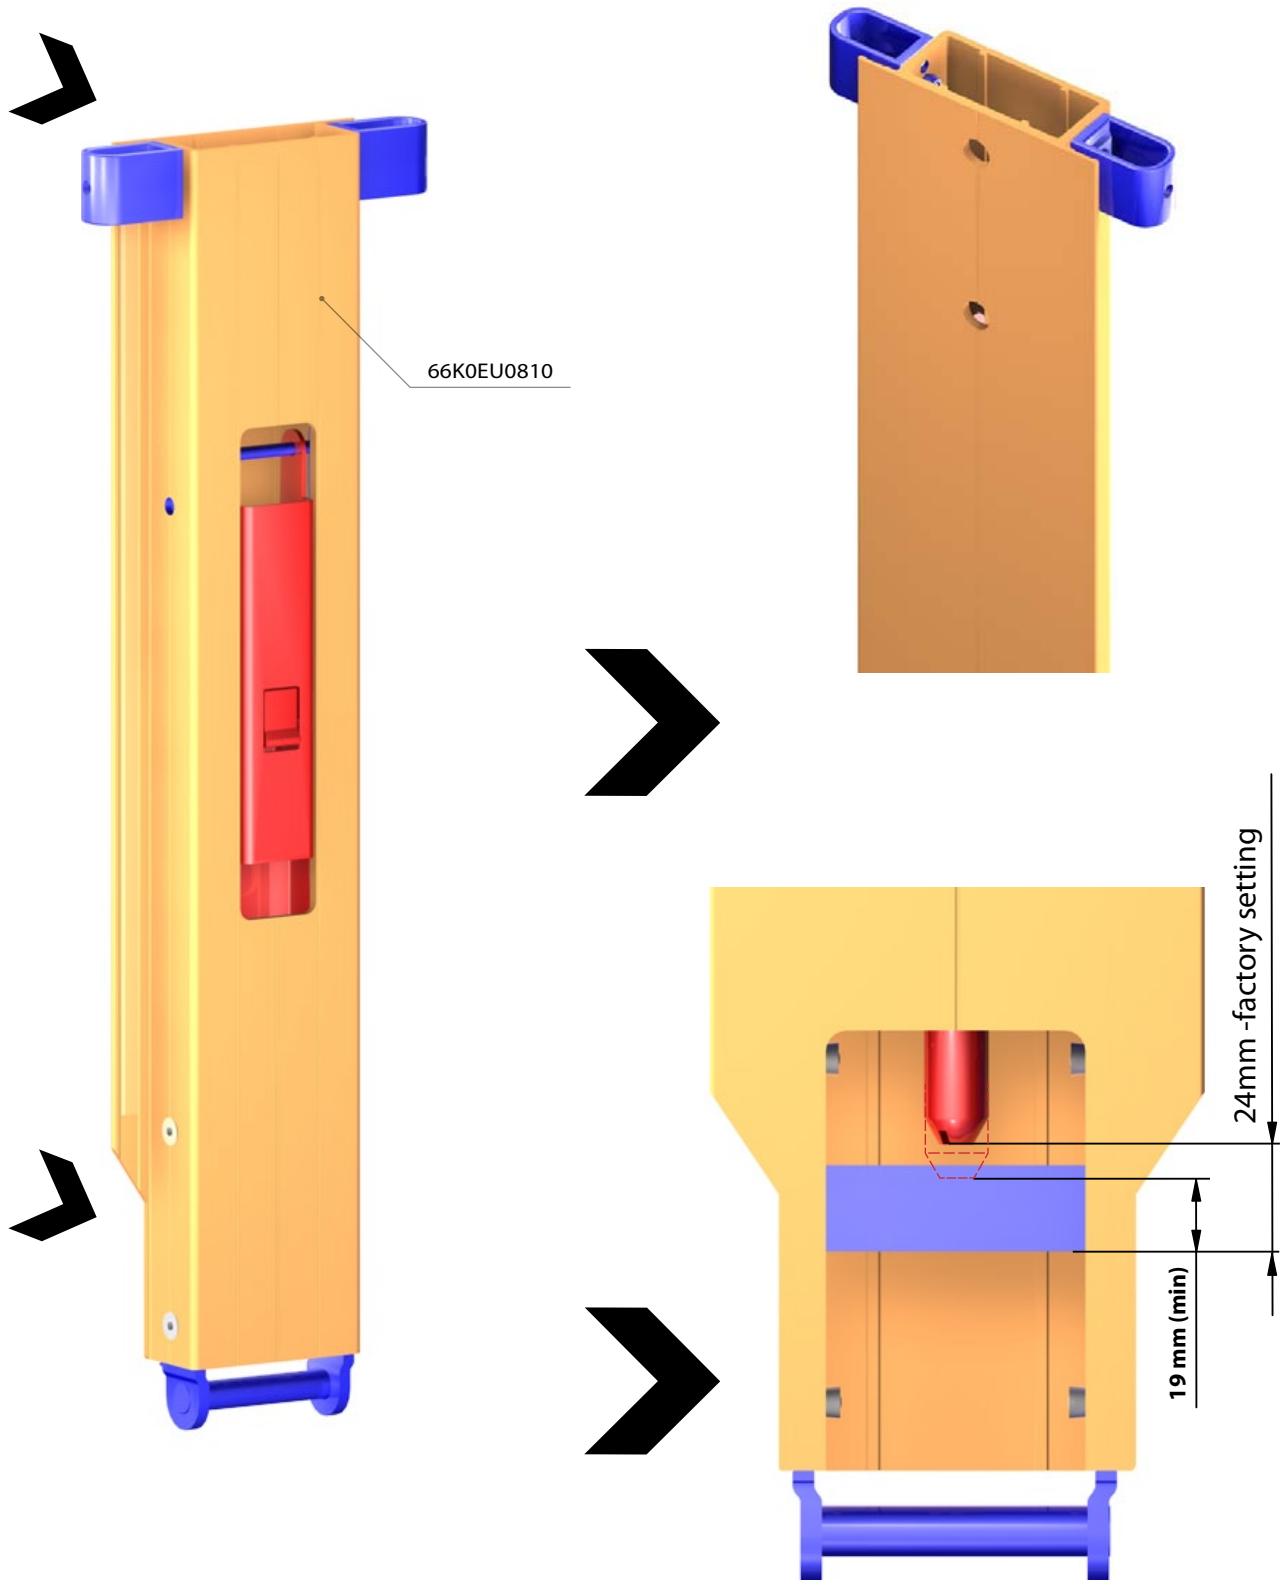

Note:

Great force must be applied to loosen the pin.